General Reminders

- The wax is recommended to be cleaned by dry ,soft cloth occasionally.
- Please note: the candle is fragile, please handle with care.
- For optimal performance, place candle on a hard flat surface.

FCC Compliance

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Other Safety Standards

Symphony candles are certified and in compliance with the following safety standards:







Instruction Manual

Warranty

Your symphony candle is guaranteed to be free from defects in material and workmanship from ninety(90)days following the date of purchase. We will replace your Symphony candle with the same or similar item. This warranty does cover damage due to neglect, misuse, exposure to heat or improper battery installation. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Please contact us by email at info@symphonycandle.com for warranty information. Proof of purchase is required.

Disclaimer

The materials on this instruction manual are provided "as is". SYMPHONY makes no warranties, expressed or implied, and hereby disclaims and negates all other warranties, including without limitation, implied warranties or conditions of merchantability, fitness for a particular purpose, or non-infringement of intellectual property or other violation of rights. Further, SYMPHONY does not warrant or make any representations concerning the accuracy, likely results, or reliability of the use of the materials on this instruction manual. SYMPHONY may make changes to the materials on this instruction manual. SYMPHONY may make changes to the materials contained on this user manual at any time without notice. SYMPHONY does not, however, make any commitment to update the materials. In no event shall SYMPHONY and its suppliers be liable for any direct, indirect, punitive, incidental, special consequential damages, to property or life, whatsoever arising out of or connected with the use of misuse of its Products. ("Products") In any circumstances, changes or modifications of its Products are prohibited. SYMPHONY reserves the right to change the terms, conditions, and notices under which their products are offered at any time without notice.

Giving you a visible music world

Dear Customers,

We hope you will enjoy the beauty and warmth of your Symphony Candle. As with any traditional candle, care is required to maintain its optimal performance, please take the time to read the instructions inside. If you have any question, please feel to contact us at:

+852 2690 3531 info@symphonycandle.com www.symphonycandle.com

Thank you for choosing our product.

Introducing Symphony



Symphony candles are more than just home decor. Combining the concept of **Rhythm - Sensing mode** and modern LED candles, Symphony captures the melodic movement of music and projects the rhythm as a dancing flame. With its lively flame, Symphony delivers a warm and tranquility aura in any style of room.

Patents

Symphony candles are designed in Hong Kong and patent protected.

Remote Control

Your Symphony candle can be used with remote control.

- Please remove the activation strip on the remote and slide the power switch on the candle to 'ON' before use.
- The remote operates within 30 ft. range.
- Rhythm Sensing mode can be activiated by remote only.

Inclusive remote control



- Power ON
- Power OFF
- Moderate Flame
- Full Flame
- Timer: 4 hours ON
- Rhythm Sensing mode
- Natural flickering mode

 
Remote Operation

- 1. Power ON: Press the 'Power ON' button to turn the candle on.
- 2. Power Off: Press the 'Power Off' button to turn the candle off.
- Moderate Flame: Press the 'Moderate Flame' button, you will see a random mild flickering flame.
- Full Flame: Press the 'Full Flame', you will see a relatively vigorous flickering preset randomly.
- 5. Timer: Press the '0N' button on your Symphony candle, and then press the 'Timer' button. You will see 4 consecutive flicks of the flame. From then on, the candle will turn on for 4 hours daily, and stay on before automatically turn off. To turn off the Timer, you may turn '0ff' the candle and turn it '0M' again.
- Rhythm Sensing mode: Press the button of 'Rhythm Sensing mode' on the remote. You will see a lifelike flickering flame synchronized with the music or sounds.
- 7. Natural flickering mode: Press the button of 'Natural lickering mode' on the remote.

To Start Symphony

BATTERY INSTALLATION

Symphony candle operates with 2x1.5V C batteries (not included). To insert batteries, remove the battery cover from the bottom of the candle and insert the batteries, ensuring correct polarity. Then restore the battery cover.



POWER SWITCH

- To turn on the candle, slide the power switch to the 'ON' position.
- To turn off the candle, slide the power switch to the 'OFF' position.
- To set the timer, slide the power switch to the 'TIMER' position to activate the timer and turn the candle on.
- -To reset the timer, turn the power switch from the 'TIMER' position to 'OFF' position, and then to the 'TIMER' at the new desired start time.

Safety Warnings

General use:

- Do not submerge the candle in the water.
- Do not leave the candle in water deeper than 2mm.
- Keep out of flammable objects, extreme temperature, or sunlight.
 Any resulting damage to the candle or its components would void the warranty.
- Your Symphony candle is breakable. Do not drop or damage its internal components, which results in the voiding of the warranty.
- Keep away from children and pets. This product contains small parts, which may pose choking hazard if detached. If swallowed accidentally, please consult the doctor or vet immediately.
- Place your Symphony candle on the protective base, on a candle stand, or in a lantern to prevent your furniture from debris.
- Symphony will not hold liability for damages or personal injuries resulted from misuse of the candle.
- Any change or modification to the Product without approval from SYMPHONY is prohibited.

Battery Cautions:

- Always use the same type of batteries when inserted. Replacing all batteries of a set at the same time.
- Do not mix the following batteries: Alkaline, NiCad, NiMid, etc.
- Battery should be recycled or disposed safely.
- Do not dispose any battery in fire.
- The batteries should be inserted in the proper polarity and compartment.
 Failure to insert the batteries correctly may result in damage to your candle or personal injury and will void the warranty.
- Remove the battery from the candle if exhausted or if the candle is left unused for a long period of time.
- Note: The color intensity and shade of the candle may vary from another due to environmental factors. The scent (if included) may fade away over time.