

## General Reminders

- The wax is recommended to be cleaned by dry, soft cloth occasionally.
- The candle is fragile, please handle with care.
- For optimal performance, place candle on a flat, hard surface.

## Safety Standards

Symphony candles are complied with the following safety standards:



## Warranty

Your symphony candle is guaranteed to be free from defects in material and workmanship for ninety(90) days from the date of purchase. We will replace your Symphony candle with the same or a similar item. This warranty does not cover damage due to neglect, misuse, exposure to heat or improper installation. Our policy does not include liability for incidental or consequential damages. Some states or provinces, where exclusion or limitation of consequential damage is not allowed, thus, the above exclusion may not apply.

This warranty also gives you specific legal rights and you may also have other rights which vary from state to state. Please contact us by email at [info@symphonicandle.com](mailto:info@symphonicandle.com) for warranty information. Proof of purchase is required.

- 7 -

## Disclaimer

The materials on this instruction manual are provided "as is". SYMPHONY makes no warranties of any kind, either expressed or implied, including but not limited to merchantability, fitness for particular purposes. Information of SYMPHONY Products ("Products") used without infringing of third party rights, or of any other nature is made with respect to information to the Products, or the Products to which the information mentions. In no case shall the information be considered as a part of our terms and conditions of sale.

Further, SYMPHONY does not warrant or make any representations concerning the accuracy, likely results, or reliability of the use of materials on this instruction manual. SYMPHONY may make changes to the materials contained on this user manual at any time without notice. SYMPHONY does not, however, make any commitment to update the materials. In no event, shall SYMPHONY and its suppliers be liable for any direct, indirect, punitive, incidental, special consequential damages, to property or life, whatsoever arising out of or connected with the misuse of its Products.

In any circumstances, changes or modifications of its Products are prohibited. SYMPHONY reserves the right to change the terms, conditions, and notices under which their products are offered at any time without notice.

- 8 -



- 1 -

## *Giving you a visible music world*

Dear Customers,

We hope you will enjoy the beauty and warmth of your Symphony candles. As with any traditional candles, care is required to maintain its optimal performance, please take the time to read the instructions inside. If you have any question, please feel free to contact us at:

Customer Service: +852 2690 3531  
Office hours: Monday-Friday  
8:30 a.m. - 5:30 p.m.(HKT)

Email: [info@symphonicandle.com](mailto:info@symphonicandle.com)  
Website: [www.symphonicandle.com](http://www.symphonicandle.com)

Thank you for choosing Symphony.

- 2 -

## Introducing Symphony



**Symphony Rhythm-Sensing Flameless Candle** are more than just home decor. Combining the concept of **Rhythm - Sensing** and modern LED candles, Symphony captures the melodic movement of music and projects the rhythm into dynamic dancing flame. With its lively flame, Symphony delivers a warm and tranquil aura in any style of room.

### Patents

Symphony candles are designed in Hong Kong and international patent protected.

### Remote Controller

Your Symphony candle is used with remote controller.

- Please remove the activation strip on both remote controller and battery compartment, then slide the power switch on the candle to 'ON' before use.
- The remote controller operates within 20 ft. range.
- **Rhythm - Sensing mode** can be activated by the controller only.

- 3 -

Inclusive remote controller



- Power ON
- Power OFF
- Moderate Flame
- Full Flame
- 4 hr Timer: 4 hours ON
- Rhythm - Sensing mode
- Natural flickering mode

### Remote Operation


- 1. Power ON:** Press 'Power ON' button to turn the candle on.
- 2. Power Off:** Press 'Power Off' button to turn the candle off.
- 3. Moderate Flame:** Press 'Moderate Flame' button, you will see a mild, random flickering flame.
- 4. Full Flame:** Press 'Full Flame', you will see a relatively vigorous flickering flame.
- 5. Timer:** Press 'ON' button on your Symphony candle, and then press the '4 hr' button. You will see 4 consecutive flashes of the flame. From then on, the candle will turn on for 4 hours daily, and stay on before automatically turn off. To turn off the **Timer**, you may turn 'OFF' the candle and turn it 'ON' again, then you will leave the **Timer** mode.
- 6. Rhythm - Sensing mode:** Press 'Rhythm - Sensing mode' button. You will see a lively flickering flame synchronized with the rhythm of sound.
- 7. Natural flickering mode:** Press 'Natural flickering mode' button on the controller.

- 4 -

## To Start Symphony

### BATTERY INSTALLATION

Symphony candle operates with 2 x C batteries (not included). Please remove the stripe of battery compartment slowly. To insert batteries, remove battery cover from the bottom of the candle and insert the batteries, ensuring correct polarities. Then, restore the battery cover.

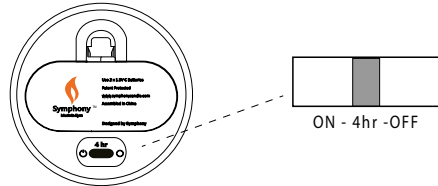

### POWER SWITCH

- To turn on candle, slide the power switch to 'ON' position.
- To turn off candle, slide the power switch to 'OFF' position.
- To set timer, slide power switch to the '4 hr' position to activate the timer and turn the candle on, then you will see 4 consecutive flashes of the flame.
- To reset timer, turn power switch from '4 hr' position to 'OFF', and then to '4 hr' at your desired time.

- 5 -

## Safety Warnings

### GENERAL USE

- **Do not submerge the candle in water.**
- **Keep out of flammable objects, extreme temperature, or sunlight. Any resulting damage to the candle or its components would void the warranty.**
- Your Symphony candle is breakable. Dropping or damaging its internal components, results in voiding of the warranty.
- This product contains small parts, which may pose choking hazard if detached. If children or pets swallowed accidentally, please consult doctor or vet immediately.
- Place your Symphony candle on a protective base, a candle stand, or in a lantern to prevent your furniture from wax debris.
- Symphony will not hold liability for damages or personal injuries resulted from misuse of the candle.
- Any change or modification to the Product without approval from SYMPHONY is prohibited.

### BATTERY CAUTIONS

- **Always use the same type of batteries when inserted. Replacing all batteries of a set at the same time.**
  - **Do not mix the following batteries: Alkaline, NiCad, NiMH, etc.**
  - Do not dispose any battery in fire.
  - Battery should be recycled or disposed safely.
  - **Batteries shall be inserted in the compartment with proper polarities.**
  - **Failure to insert batteries correctly may result in damage to your candle, or personal injury and will void the warranty.**
  - **Remove batteries from the candle if exhausted or the candle is left unused for a long period of time.**
- Note: Color intensity and shade of the candle may vary from one another due to environmental factors. Scent (if applicable) may fade away over time.

- 6 -